



Replacing Crosley CR42 Needle

The purpose of this repair guide is to give you clear instructions on how to replace the Crosley CR42 needle. Furthermore, this guide will also include a troubleshooting page and external links for you to use as a resource.

Written By: Roberto Rosila



INTRODUCTION

Replacing the needle is one of the quickest and easiest processes of repairing the device. This requires no opening of the device and can be done in a matter of minutes.



PARTS:



- [NP1 Needle](#) (1)
-

Step 1 — Needle




- The needle is the red plastic piece on the end of the arm.


Step 2

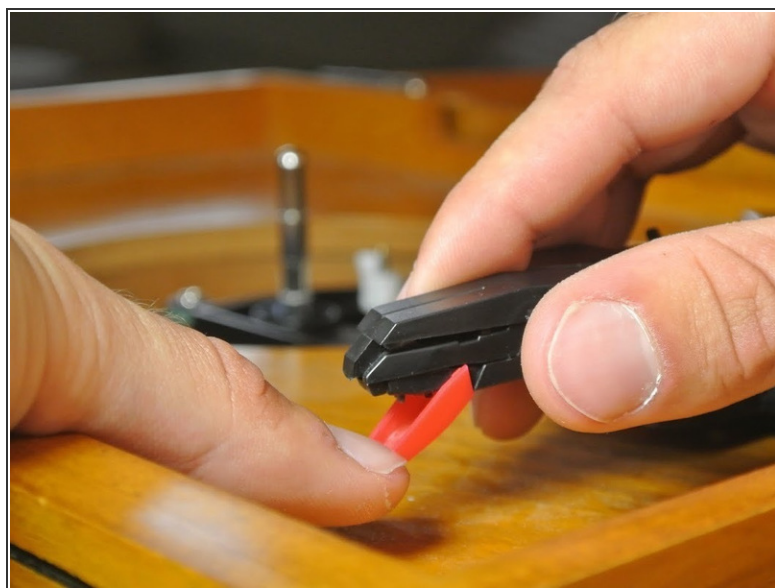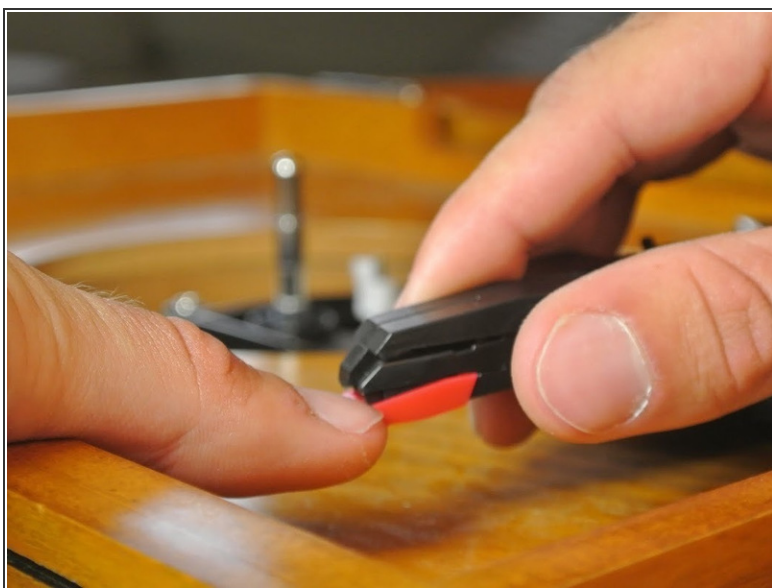

- While holding the front of the head in place, use your fingernail to pull down on the front of the needle.

 The needle should hang, as shown.

Step 3

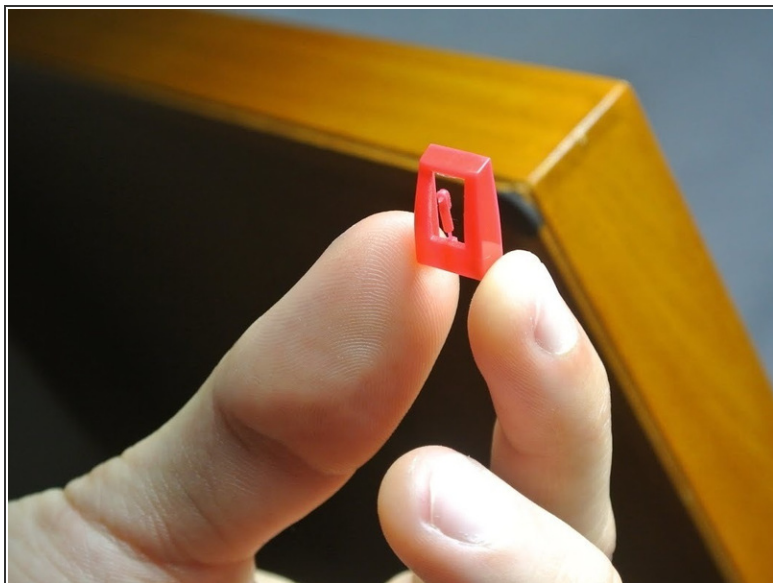

- Finally, remove the needle by pulling down on just the red piece.

(i) WHEN ATTACHING NEW NEEDLE: Make sure the needle clips into the head. Fit the back of the piece in first, then snap the front into place. You should hear a click.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 04:02:43 PM.